

CasualWay

HOME & GARDEN

Instruction Manual



SKU: 2434589

8'x5' Roof Style Grill Gazebo

Safety Information

- **WARNING:** KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This Tent is Made With Fabric That Meets CPAI-84 Specification For Flame Resistance. It is Not Fire Proof. The Fabric Will Burn If Left In Continuous Contact With Any Flame Source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
- Always read and follow the instructions before use.
- When assembling and using this product, basic safety precautions must always be followed to reduce risk of personal injury and damage to the product or surroundings.
- Be sure to keep all children and pets away from assembly area.
- Some parts contain sharp edges. Wear protective gloves when handling these items.
- It is recommended that, for safety issues, at least 2 people assemble the gazebo. You must schedule enough time to complete the assembly. You can not leave the unit unattended if it is not fully assembled, even if it is already anchored to the ground.
- You should begin the assembly no less than 6 feet from any fixed obstruction such as fences, a garage, a house, overhanging branches, electrical wires or laundry lines.
- You must assemble your unit on level ground or platform. The unit must be anchored to either wood, stone tiles or concrete using appropriate screws for that flooring, or anchored into the earth or grass with proper camp nails or anchors. Failure to do so may risk blowing away by wind.
- Check that all screws are tight before and during usage.
- Do not place any type of heat conductor under, or within 5 feet of, the unit including, but not limited to a barbeque or space heater.
- The gazebo is designed to provide shade only. Do not use this gazebo in strong wind and rain. Wind and rain can damage the gazebo and could result in injury to you and others.

Care and Maintenance

- Hand wash canopy with a mild solution of soap and water, rinse completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Your gazebo has been created for three seasons however the roof will not resist to cold and heavy and/or continuous snow accumulation. The frame may be left up year-round however you **MUST** remove the roof canopy during winter. For areas where there is severe cold during winter it is recommended that you remove the Roof Canopy, Mosquito Netting (and Curtain if you have purchased it) and store them safely in a dry area throughout these conditions.
- The unit must always remain anchored properly to the floor or ground using the appropriate screws to enjoy safe usage of the gazebo.
- Check periodically that all screws are tight to maintain the solidity of the structure.
- Do not put any Mosquito Netting (and Curtain) in any washing machine or dryer.

Extra Reminder: This gazebo has been created as a non-permanent structure. It is designed for sun shade and is not a shelter against adverse weather conditions. Do not use this gazebo in storms, hurricanes, typhoons, strong wind, and rain. Be aware that the water may sit and pool at the fabric canopy top after rain and may cause severe damage to the gazebo. Please take a minute to lose and remove the roof canopy at least before the weather!

PLEASE READ

This is a shade structure, not intended to use in rain, very windy or other severe weather conditions. The structure may collapse due to water pooling on canopy or strong wind blow. The canopy top must be loosed and/or removed to avoid weather damage.



Secure the frame



*Keep away from
heat sources and
open flames.*






















*Do not use during
severe weather
conditions.*








*Do not use in
windy conditions*

Pre-Assembly









Part List

Description	Part Number	Qty	Part Image
Right Post	A1	2	
Left Post	A2	1	
Left Post with Opener Hole	A3	1	
Long Big Roof tube	B1	3	
Short Big Roof tube	B2	1	
Vent top connector	C1	1	
Roof Rib connector	C2	1	
Long Vent tube	D1	3	
Short Vent tube	D2	1	
Long Screen	E	2	
Short Screen	F	2	
Shelf G1	G1	1	
Shelf G2	G2	1	
Utility hooks	H	1	
Shelf Connector	I	4	
Vent Cover	J	1	
Main canopy	K	1	
Central Hook	L	1	
"U" connector	M	4	

Pre-Assembly (continued)

Description	Part Number	Qty	Part Image
Feet Cover	N	4	
Feet	O	4	
Opener	P	1	
Decorative Ball	Q	1	
Adjustable eave tube	R	2	

 
Hardware Pack

Description	Part Number	Qty	Part Image
Bolt (M6*15)	AA	48	
Gasket	BB	56	
Bolt (M6*35)	CC	4	
Hexagon Nut	DD	4	
Cross large flat head bolt (M6*15)	EE	2	
Peg Stake	FF	8	
Wrench	Z1	1	
Allen Key	Z2	1	

Note: The gazebo needs to be installed in cooperation with two people. The following tools are not included and needed for assembly:



Pistol Drill



Hammer




Ladder



2 people

Assembly

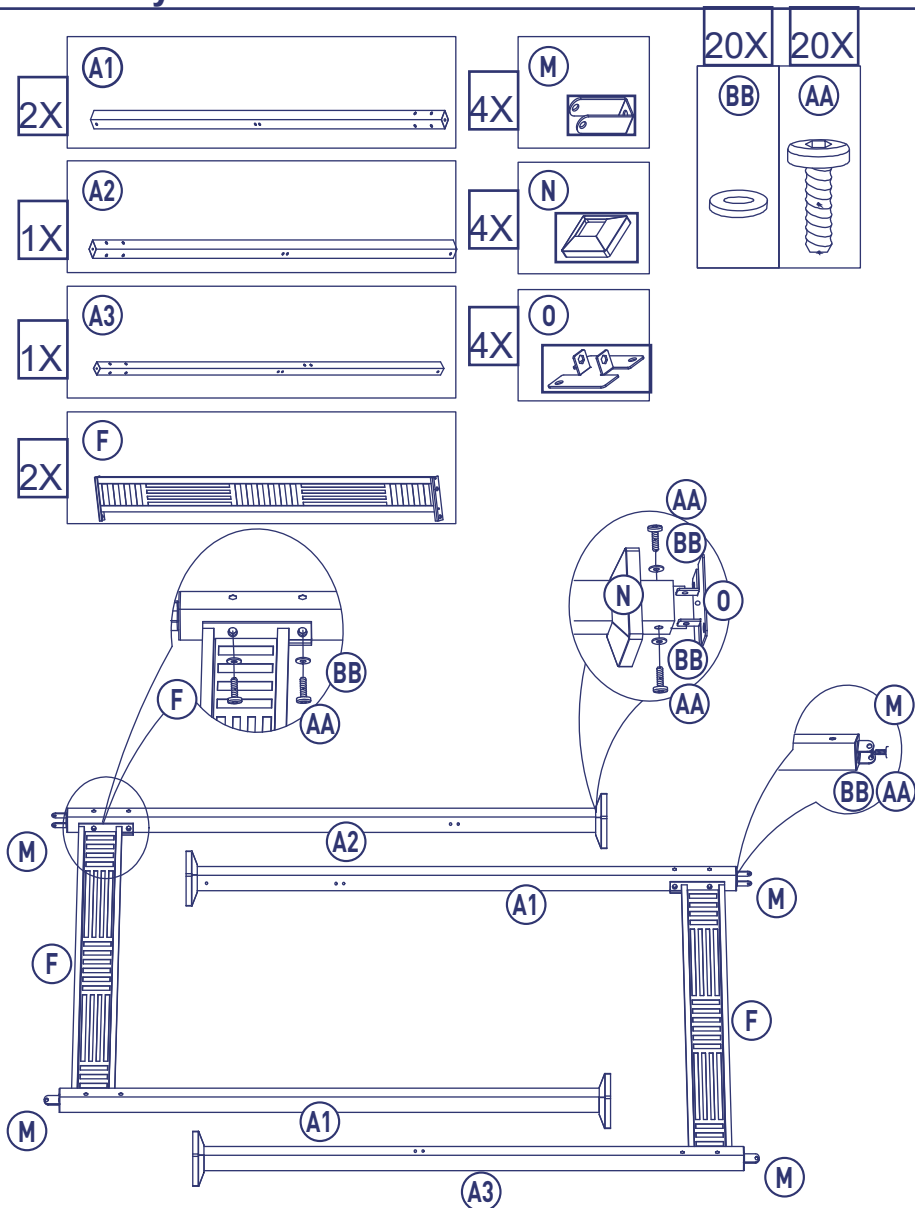


STEP 1

1-1: Attach the Short Screen (F) to the Post (A1, A2, A3) with the Bolt (AA) and Gasket (BB).

1-2: Let Feet Cover (N) go through post (A1, A2, A3). Then attach Feet (O) to the bottom of post with the Bolt (AA) and Gasket (BB).

1-3: Attach the U shape connector (M) to the top of Post (A1, A2, A3) with the Bolt (AA) and Gasket (BB).



Assembly (continued)

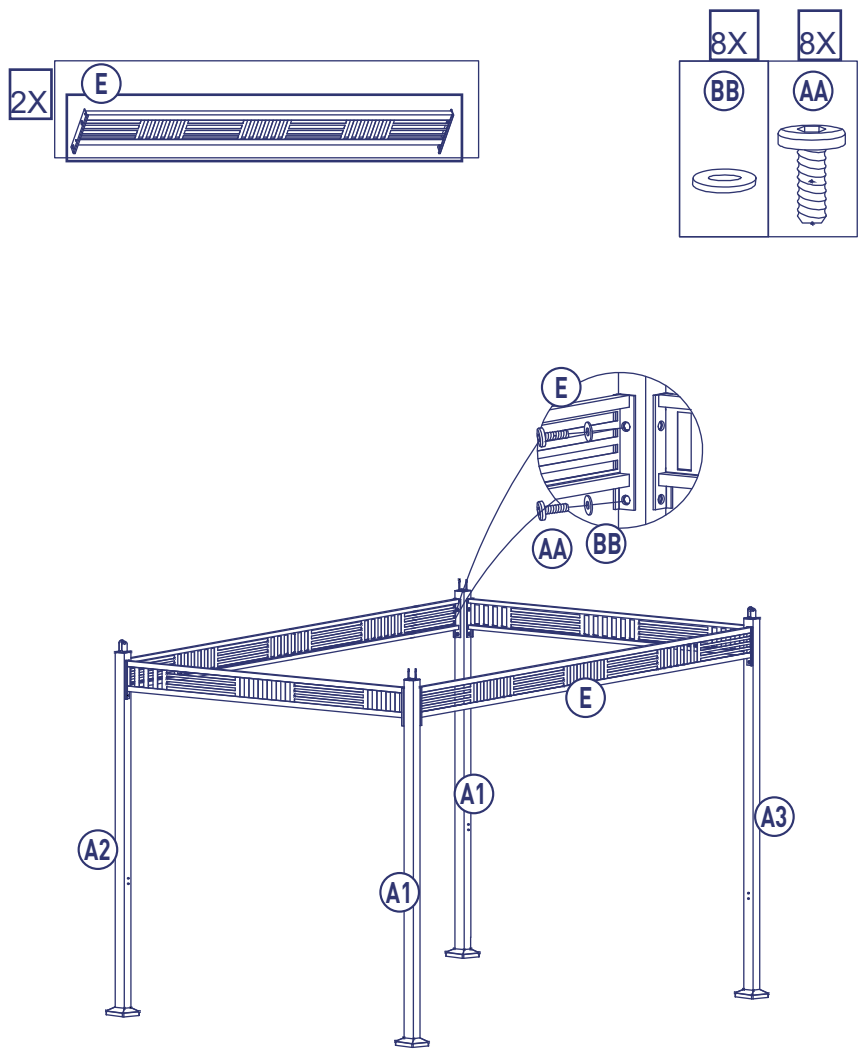

STEP 2

2-1: Attach the long screen [E] to the Post [A1, A2, A3] with the Bolt [AA] and Gasket [BB]




Assembly (continued)

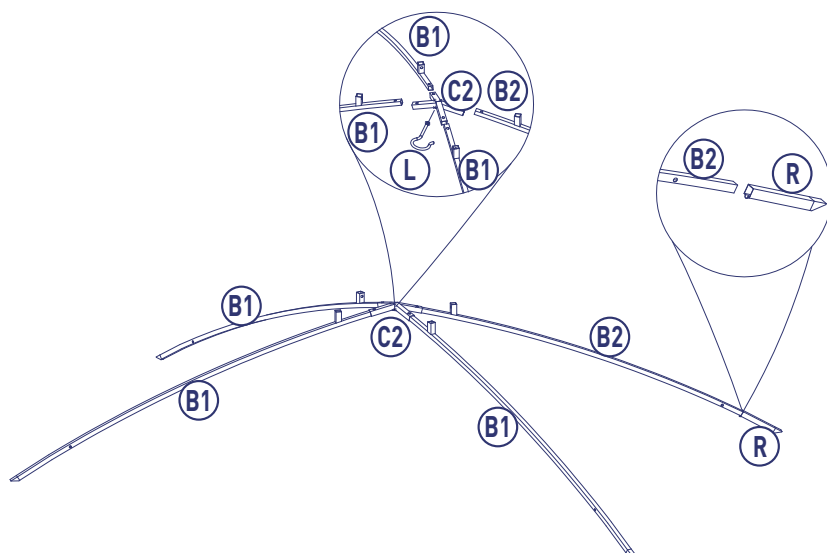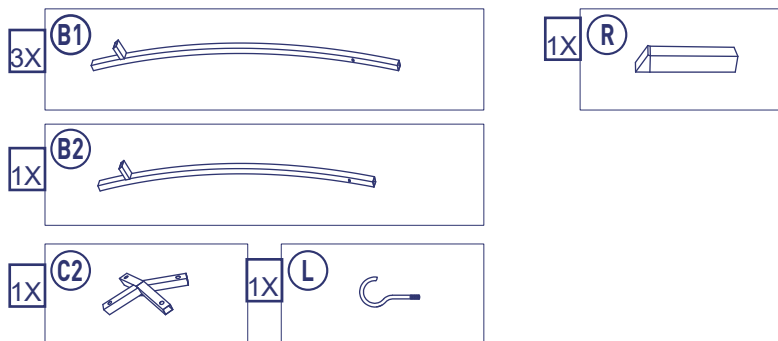

STEP 3

3-1: Attach the Long Big Roof tube (B1) and Short Big Roof tube (B2) to Roof Rib connector (C2), fix Hook (L) to the central of Roof Rib connector (C2). Attach the Adjustable eave tube (R) to the Short Big Roof tube (B2)

Assembly (continued)




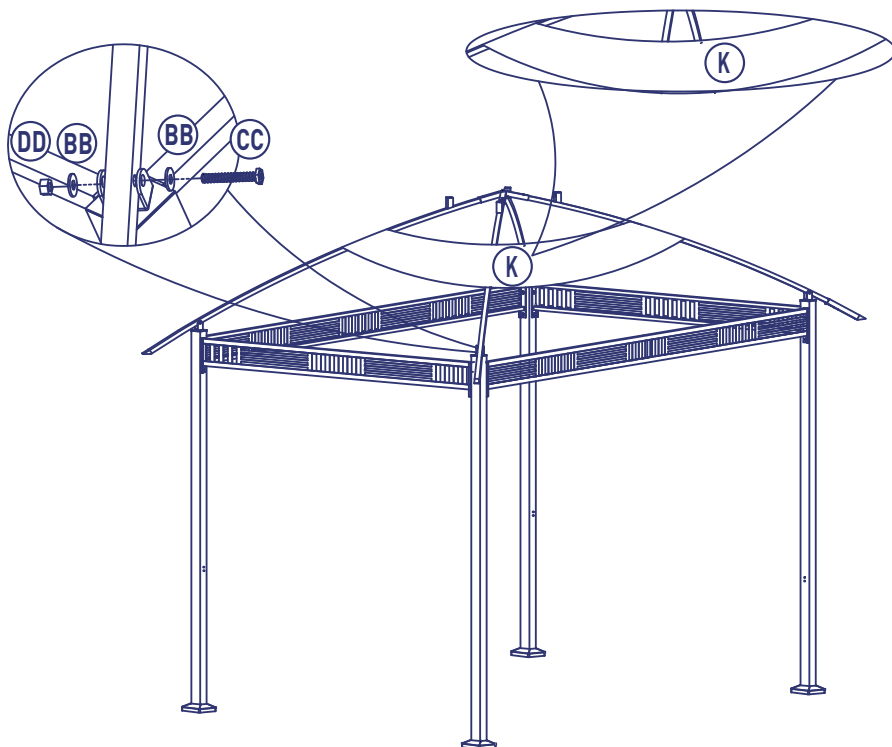
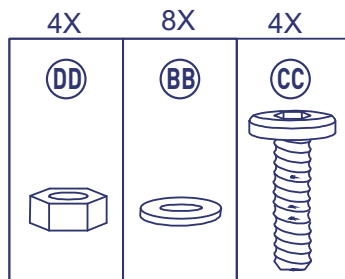
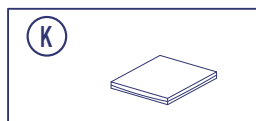


STEP 4

4-1: Insert the Big Roof tube (B1, B2) into the U shape part (M) on top of Post (A1, A2, A3), then use bolt (CC), Gasket (BB) and Hexagon Nut (DD) to keep Big Roof tube (B1, B2) stable on the Post (A1, A2, A3).

4-2: Put the main canopy (K) on the top the roof tube (don't fix it before further instruction).

     Assembly (continued)

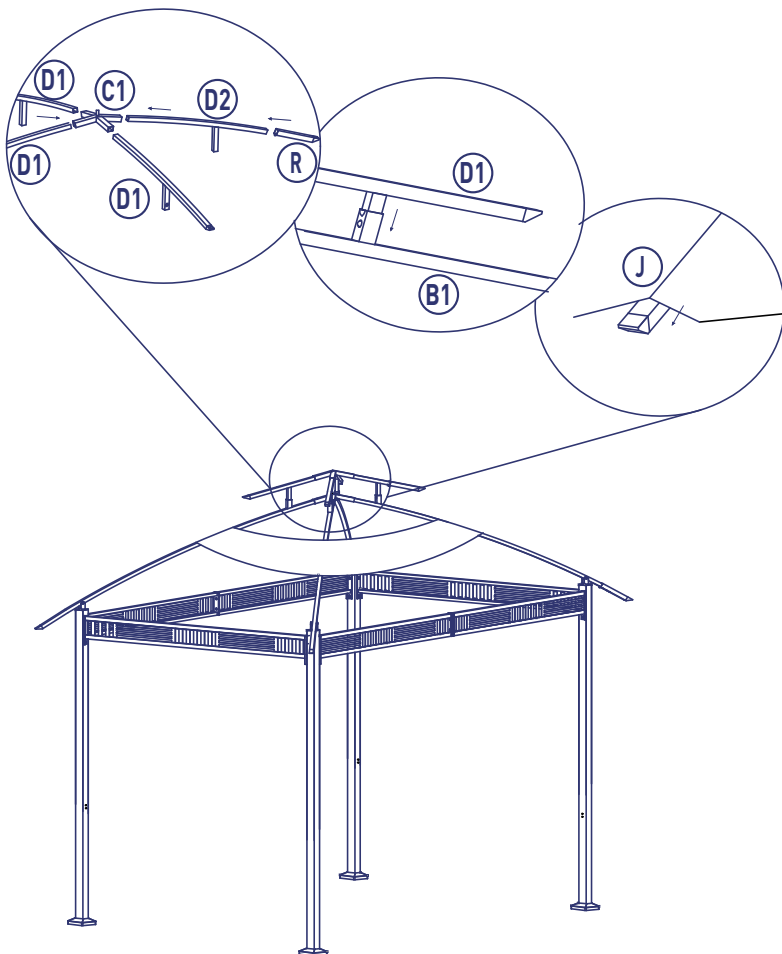




STEP 5

5-1: Insert the Long Vent tube (D1) and Short Vent tube (D2) to the Vent top connector (C1). Attach the Adjustable eave tube to the Short Vent tube (D2). Then attach the vent tubes to roof.

5-2: Extend the Vent Cover (J) onto the Vent top by fixing the Vent Cover at four corners of top. Attach the Decorative Ball on the top of Vent.

5-3: Fix the main canopy (K) at four corners of top.

Assembly (continued)

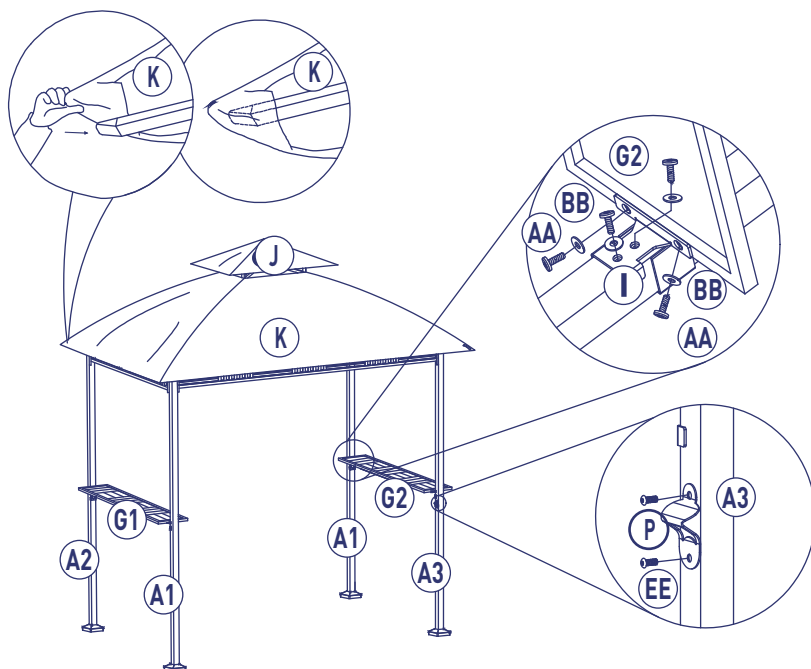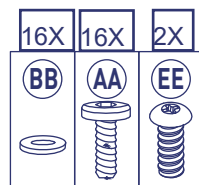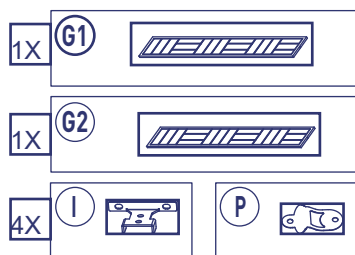



STEP 6

6-1: Attach the Shelf Connector (I) with the Post (A1, A2, A3) with the Bolt (AA) and Gasket (BB).

6-2: Insert the Shelf (G1, G2) into the Post (A1, A2, A3), then attach them tightly with the Bolt (AA) and Gasket (BB).

6-3: Attach the Bottle Opener (P) on Post with Opener Hole (A3) with Cross large flat head bolt (M6*15) (EE).

Assembly (continued)

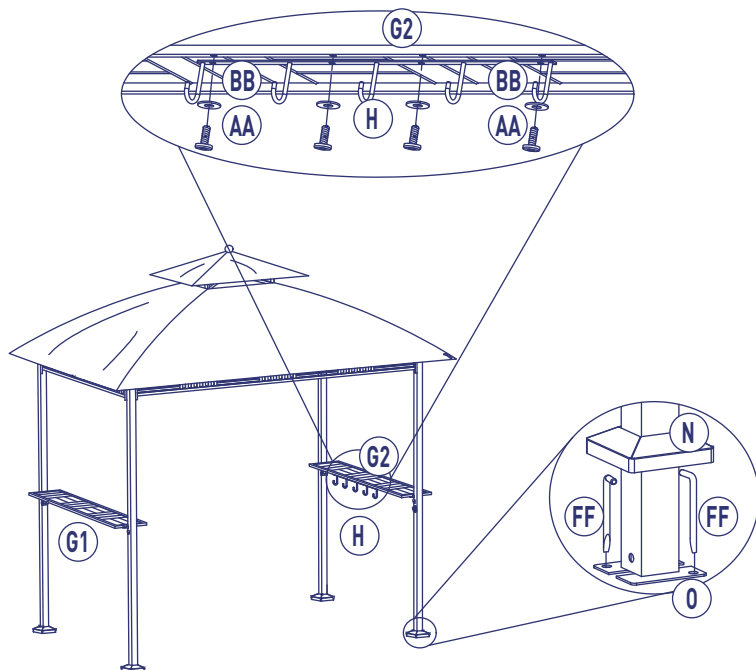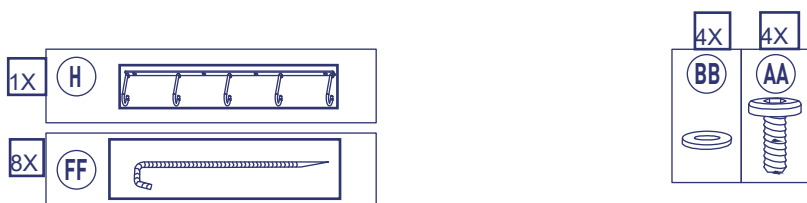

STEP 7

7-1: Then attach the Utility hooks (H) to Shelf (G2) with the Bolt (AA) and Gasket (BB).

7-2: Fix the gazebo to the lawn by using the Peg stakes.

SKU: 2434589 Code: 19JS00120409

Email: support@casualwayliving.com

**CASUALWAY USA LLC C/O LEADER LEISURE INTL
CO LTD 1623 LOLA WAY OXNARD CA 93030**

v1. 2022